

Cars & Utes

For height clearance information on 4wd vehicles refer to the sticker on the windshield.

It is the renter's responsibility to ensure the vehicle avoids overhead damage. Any overhead damage incurred is not covered by insurance and will be repaired at full cost to the renter

For fuel type refer to your key tag or fuel filler cap.

Spare wheel

The tool kit and jack will be located under the floor of the boot in most cars and behind the rear seats in utes.

The spare wheel will be located also under the floor in the boot of most cars and underneath the rear of the vehicle tray in utes.

For utes the spare wheel can be lowered using the socket wrench in the vehicles tool kit. The lowering nut is at the rear of the vehicle and can be accessed through a small hole.