

Vans

Our vans overhead clearance ranges in height between 2-3 metres. Refer to your windshield for height information of your vehicle.

It is the renter's responsibility to ensure the vehicle avoids overhead damage. Any overhead damage incurred is not covered by insurance and will be repaired at full cost to the renter

For fuel type refer to your key tag or fuel filler cap.

Spare wheel

The vans tool kit and jack are located under or behind the removable plastic trim in the side loading step on Toyota vans.

The spare wheel is located underneath the rear of the van and can be lowered using the socket wrench in the vans tool kit. The lowering nut at the rear of the cargo space of the van on the floor. Sometimes it is under a plastic cap.