


Trucks

For height clearance information refer to the sticker on the windshield.

It is the renter's responsibility to ensure the vehicle avoids overhead damage. Any overhead damage incurred is not covered by insurance and will be repaired at full cost to the renter

DPD (Diesel Particulate Diffuser)

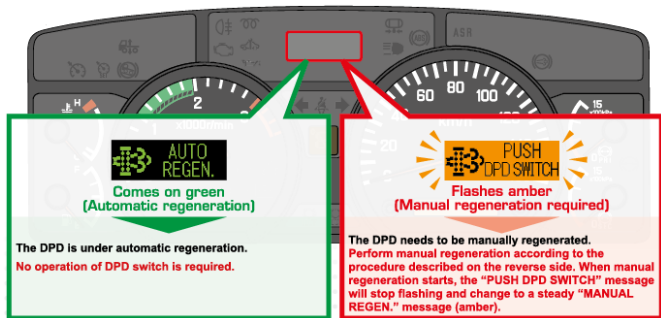


HOW TO PERFORM DPD REGENERATION

- If the DPD light comes on green the DPD will complete its burn automatically. The vehicle must remain on until this is complete.
- If the DPD Flashes Amber, the vehicle must be stopped and in either neutral (N) or park (P)

depending on vehicle model with handbrake engaged. Hold the DPD switch located on the dash until the message “MANUAL REGEN” appears. When this message disappears, the burn is complete.

- **THE VEHICLE MUST REMAIN ON UNTIL THE VEHICLE HAS FINISHED ITS BURN.**
- Failure to allow the vehicle to finish its burn will result in the vehicle entering limp mode and requires towing to a mechanic at a cost to the renter.

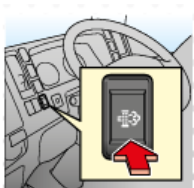

Hydraulic Lift Operation

Trucks that are fitted with Hydraulic Lifters will have a red plastic key with the ignition keys. This is used to operate the lift at the control box which is located under the box at the rear of the passenger's side of the vehicle.

Prior to operation ensure the rear of the truck is clear of obstruction and people. Make sure people in the area are aware that it is in use and to keep clear. Remove the safety line to allow the lift to drop the floor.

The platform will push hard against the floor of the truck in the fully up position. Keep clear of this area to avoid injury.

IF THE LIFT IS TO BE USED CONTINUOUSLY FOR SOME TIME, DETACH THE RED TOGGLE AND LEAVE THE TRUCKS ENGINE RUNNING TO AVOID RUNNING THE BATTERY FLAT.

A call out fee will be charged if a flat battery is caused from using the hydraulic lift without the engine running.